MODEL CHA-250B

HF Broadband Ground Plane Antenna

Instruction Manual

Thank you for purchasing our products.

For your safety:

Read this manual carefully for proper handling and operation before using. Keep this manual in a safe place for future reference.

★Check if all parts included in the box, according to the below Parts List.


[Features]

- •Non-radial and Ultra Wide-Band GP Antenna, and easy assembling.
- Thick base element and stainless bolts/nuts for heavy-duty opera on and weather-resistant.

[Specifications]

- Freq.Band: Tx / 3.5~57MHz, Rx / 2.0~90MHz
 Antenna Type: Force matching type Ground Plane
 Max Power: 250 W (SSB mode), 75 W (Digital mode)
- •VSWR: 1.5 or less (refer the below graph)
- Impedance : 50ΩConnector : SO-239 type
- ●Moun ng Mast Diameter: Φ30~72mm
- Max Wind Survival: 30m/secLength: approx. 7.13mWeight: approx. 3.2kg

◆ Return Loss and VSWR Data

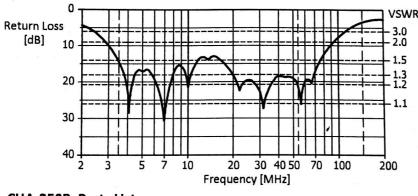

CHA-250B Parts List


	Parts List	Qty.
1	Feeding Section (Brackets and Pipe (1) Included)	1set
2	Hose band (for mounting pipe(1))	1
3	Radial Bracket w/t power feeding section	1
4	Pipe ② for inserting pipe ①	1
5	Pipe ③ for inserting pipe ②	1
6	Pipe 4 for inserting pipe 3	1
7	Pipe (5) for inserting pipe (4)	1
8	U-Bolt with washer and hex nut M8	2sets
9	Hex Bolt M5x35(with metallic washer), wing nut	3sets
10	Hex Bolt M4x30(with metallic washer), wing nut	2sets
11	Self-fusing tape (20cm)	1
12	Guy wire ring (Plastic)	1

PRECAUTIONS for Installation

- Wearing a safety hat and a life line during installing on a roof top or any high places is highly recommended.
- Erect this antenna in a safe place


Check if the Cable Connector fits into the Antenna Connector.

- Make sure all nuts, bolts and screws are securely ghtened. Failure to follow this would cause a serious accident or performance degradation.
- Check if waterproofing at each connec on is appropriately done. If not, it would cause short-circuit and/or corrosion.
- Do not erect this antenna near any electrical power lines, steel towers and/or buildings. Such objects would cause performance degradation.

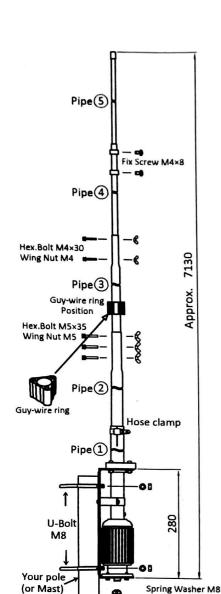

[How to install & Use]

- 1. Pull the Pipe (2) from Pipe (1), as shown in the left fig. At 200mm inserted position, fix it with the hose clamp.
- 2. Fix the lower part of Pipe 3 with the hex bolt and the wing nut.
- 3. The ring for the guy-wire is installed in the element pipe 3, and put the guy-wire by using it.
- 4. Pull the Pipe (5) at the top of the antenna. At 100mm inserted position, fix it with the lock fitting screw.
- 5. Insert the Pipe 4 into the Pipe 3, and fix it with the hex bolt and the wing nut.
- 6. Attach the antenna to your pole with the U Bolt, Spring Washer, and Hex Bolt.
- 7. Connect your 50Ω Coax Cable(w/t PL-259 Connector) to Feeding Section SO-239, and waterproof it with the self-fusing tape etc.
- 8. Check if Antenna Resonance Point is SWR 1.5 or less.

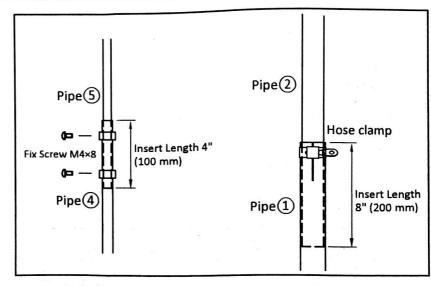

★ Stretch the self-fusing tape two times longer and wrap it to the joint of connectors for waterproofing.

! Precautions for operation

•Do not touch the antenna while transmi ng, otherwise you would get burned.

(Assembly drawing)

50Ω Coax.Cable Optional Accesory Make one or two loop,

● Do not touch the antenna or coax cables while lightning. Checking SWR a er lightning is highly recommended.

decrease of the cable.

- Do not use this antenna outside its specifica on. Failure to follow this would damage the antenna.
- Make sure to adjust the antenna in a right way. Higher SWR could cause the performance degradation.
- •Never a empt to fix or modify this antenna by yourself.

Hex.Nut M8

[After-Sales Service]

We provide the replacement parts for the damages by unintentional accidents or for deterioration with long-term use. Please ask the local shop you purchased this product. This product is made under the stringent quality control. Should there be any breakage in transit, please do not hesitate to contact the shop you purchased this product.

[Maintenance]

☆If any unusual situation happens, stop using immediately and ask the local shop you purchased this product. Confirm if the product works normally before operating.

Be sure to change the parts which have strength poverty or deformation across the ages etc.

and fix cable and mast for the pull load

■ Specifications or appearance is subject to change without notice.

COMET CO.,LTD.

4-18-2, Tsuji, Minami-ku, Saitama-shi, Saitama-Pref, 336-0026, JAPAN

TEL: 81-48-839-3131 / FAX: 81-48-839-3136 URL: http://www.comet-ant.co.jp/english

5th edition / Sep 2017 . Printed in JAPAN. Copyright (C) 2012 COMET CO.,LTD. All Rights Reserved.